


Light Column / Post Commando Socket Installation

Drilling and dropping cable

- Drill 20mm hole at specified height of 3.5m (A)
- Drop artic flex down post
- Wire flex into existing light column fuse (i.e. Lucy)

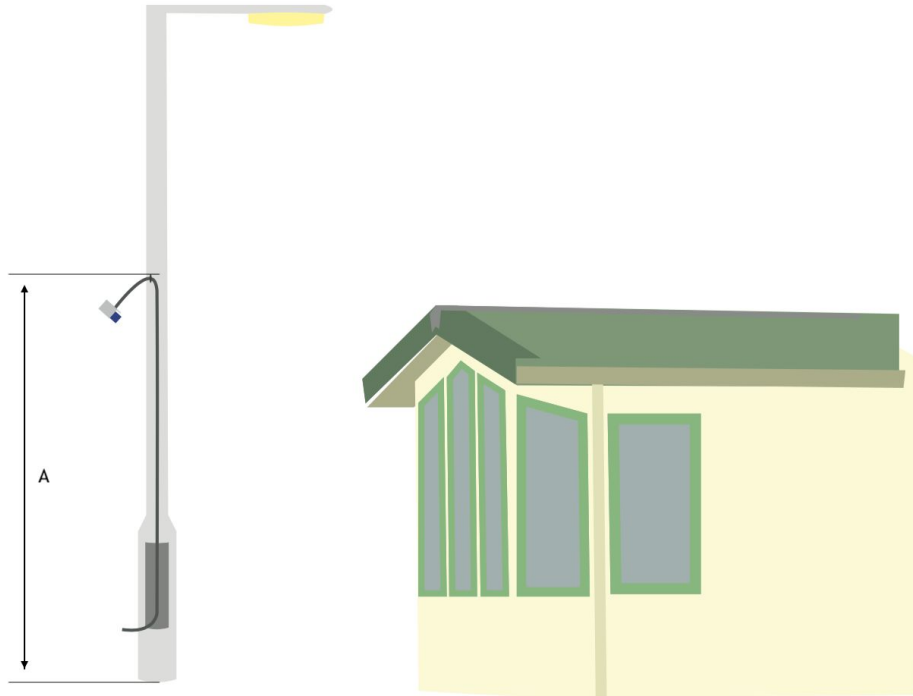

Fitting the socket

- Push fit the bung into the post to create a seal
- Affix the back plate to the post with the jubilee clip and tighten
- The Camping Connect engineer will fit the WiFi box to the post at the desired height at a later date.

